





★The **STAND BY — ON** switch.

Slide the **STAND BY—ON** switch to the “ON” position and you will be greeted with a fanfare and can play PSS-7. Slide the switch to the “STAND BY” position to turn the PSS-7 off.

• If you leave the switch “ON”...  
If the switch is left “ON”, the PSS-7 will sound an alert. Make sure you slide the switch to the “STAND BY” so that you don’t waste battery power.  
If the switch is still left “ON”, and the keyboard is not touched for a period of 10 minutes, a confirmation alert will sound. If the keyboard is still not touched, the alert will sound every 10 minutes.

★The **VOLUME** buttons

Press the **+** volume button, the “PON” sound you hear will be a little louder.  
Press the **-** volume button, the “PON” sound you hear will be a little softer.

NOTE • If you press the **+** or **-** button and you don’t hear “PON”, the sound level is at its highest or lowest setting and cannot be adjusted further.  
• Simultaneously press the **+** and **-** buttons to set the volume level to its maximum setting.  
• The volume is set to its maximum setting **STAND BY—ON** switch is set to “ON”.

## Let's listen and play!

Inside the PSS-7, there are 10 songs. First, let's listen to the first song in the **SONGS** list, “Mickey Mouse March”, and then try playing along with it.

### 1 Start “Mickey Mouse March”.

Press the blue **SONGS** button one time. You know this song very well. It's “Mickey Mouse March”.  
Press the red **STOP** button, and “Mickey Mouse March” will stop.  
Next, let's try to play along with the song.

### 2 Try playing along with the song.

If you are ready, try playing along with the song on the keyboard. The melody disappears and you can hear the notes you play.  
Try playing the melody to “Mickey Mouse March” karaoke style.  
How did you do? If it was too hard to play, try playing it at a slower tempo (the song's speed).

### 3 “One, two, three, four!”. Try starting the song like this.

Press the red **STOP** button to stop the song.  
Tap the **STOP** button four times like this. “One, two, three, four!”  
Did the song play at the speed you tapped?  
Is this an easier tempo to play along with? You can also use the tempo **+** **-** buttons to adjust the tempo.  
If you think it's a little too fast, press the **-** button. You will hear a “PON”, and the tempo will slow down a little.  
If you think it's a little too slow, press the **+** button. You will hear a “PON”, and the tempo will speed up a little.

**SONGS**

- Mickey Mouse March
- Little Brown Jug
- Mission Impossible
- Chopsticks
- Jingle Bells
- Pop Goes the Weasel
- Gallant Pig
- Awarding an Honor
- Kissing Santa Claus
- Over the Rainbow

When you press the blue **SONGS** button, the first song in the song list, “Mickey Mouse March” will start. The next time you press it, the second song “Little Brown Jug”, starts, and so on. After the tenth song in the list, “Over the Rainbow”, the next song to be selected will be the first song in the list “Mickey Mouse March”.

NOTE • To start playback from the beginning of the selected song, press the red **STOP** button to stop playback, then press the **STOP** button to start playback of the song from the beginning.

**Try playing the song “Gallant Pig” with a pig's voice.**

Choose the seventh song in the song list “Gallant Pig”. Next, choose “Pig” from the instruments list. What do you think will happen?  
Doesn't that sound funny? It sounds like a pig is singing “Gallant Pig”. Try to play the melody yourself. Try the same thing using other animal voices like “Cat”, “Dog” or “Cow” for the melody.

Try this one for fun!

NOTE • If the keyboard is not played for one measure, the PSS-7 will play the melody again.  
• When you press the **STOP** button to select a song, the PSS-7 will automatically select an instrument that matches the song for you to play on the keyboard.

NOTE • If the song is in 3/4 time, tap the **STOP** button 3 times.  
• If you tap the **STOP** button while the song is playing, the song's tempo will adjust to the same speed that you tapped.  
• If you tap the **STOP** button too slowly, the tap function will not operate. If you tap the **STOP** button too fast, the tempo will be set to 240 beats per minute.

NOTE • The tempo can be adjusted between ♩=40-240.  
• If you press the **+** or **-** button and you don't hear a “PON”, the tempo is at its highest or lowest setting and cannot be set any faster or slower.  
• Simultaneously press the **+** **-** buttons to return the tempo to its original setting.

● **Selecting normal instruments.**

There are 100 types of instrument sounds in the PSS-7. Let's try to play some of the 25 normal instrument sounds (shown on the panel).  
Press the yellow **i2** button once and the instrument that sounds will be the first instrument in the **i2** INSTRUMENTS list (Keyboard / String).  
Press the yellow **i3** button once and the instrument that sounds will be the first instrument in the **i3** INSTRUMENTS list (Wind+ / Sound Effect).  
The next time you press either of the buttons, the next instrument in the list will be selected.

● **Selecting variation instruments.**

See the “Instrument List” on the reverse side.  
All of the instruments listed on the panel have three variations (25 x 3 = 75 types).  
Look at the instrument list and try to select and play some of the different types of instruments (Effect/Phrase/Funny).  
To select a variation instrument, press the orange **x4** button. Every time you press the **x4** button, Normal → Effect → Phrase → Funny → Normal → ... variations will be selected in that order.  
For example, when the piano (normal) is selected, and the **x4** button is pressed,  
→ Sustain Piano → Ragtime Piano → Game Over → Piano (Effect) (Phrase) (Funny) (Normal)  
will be selected in that order.

NOTE • When you press the **x4** button, the selected instrument will sound and then you can play the instrument.

## Try playing in the band.

Inside the PSS-7 there are 30 different kinds of band (accompaniment) performances. In the **BANDS b1** list you'll find some great rhythms to play along with, **b2** has some nice classic pieces with melodies, and **b3** has some fun pieces to play along with. First, let's listen to “Für Elise”, which is the third song in the **BANDS b2** list. Just as if you are a member of a five-piece band (COMBO), play along with the band.

### 1 Start “Für Elise”.

Press the green **b2** button three times, the third song, “Für Elise”, in the **b2** list will start playing.  
Press the red **STOP** button, and the band stops playing.

### 2 Become a band member (piano/electric guitar, etc.)

Try pressing the yellow **i1** button. What kind of instrument do you hear?  
Every time you press the **i1** button, a different instrument plays. Use your ear to find the piano sound, which is the first instrument in the yellow **i1** list (COMBO).  
Are you feeling like a pianist? See if you can play along with the melody.  
Press the yellow **i1** button and the sound you just played on the keyboard (PIANO) will change to E GUITAR, the second instrument in the yellow **i1** list.  
Are you feeling like a guitarist? See if you can play along with the melody.

Press the yellow **i1** button for the first time, the first instrument in the list will be selected. After that, every time you press the button, the next instrument in the list will be selected. You can select from five instruments (combo) in the **i1** button list. The combo is a preset band composed of standard instruments.  
After you select percussion, the next instrument selected will be piano.

### 3 “One, two, three!” Start the band!

Press the red **STOP** button to stop the band.  
Tap the **STOP** button three times like this. “One, two, three!”  
Did the band start playing at the speed you tapped?  
You can change the band's tempo, just like you did for the song, by using the tempo **+** **-** buttons.

**BANDS**

Top 10	Music Box	Comic Dancer
Video Pop	Gymnopedies	Space Fantasy
House	Für Elise	Entertainer
Reggae	Siciliana	Mambo
Jazz	Polovtsian	Lovely Alien
Rock	Musical	Horror
Funk	Merry-Go-Round	Spy
Bossa Nova	Pop Ballad	Fanfare
Salsa	Lullaby	Safari
Surf	Waltz	Carnival

NOTE • The band performance will continue to repeat until the red **STOP** button is pressed.  
• To start the band performance from the beginning of the selected performance, press the red **STOP** button to stop playback, then press the **b1** - **b3** button to start playback of the performance from the beginning.  
• When you select a band performance, the tempo that matches that performance will be automatically selected.

When you press the **i1** button for the first time, the first instrument in the list will be selected. After that, every time you press the button, the next instrument in the list will be selected. You can select from five instruments (combo) in the **i1** button list. The combo is a preset band composed of standard instruments.  
After you select percussion, the next instrument selected will be piano.

NOTE • If you press the yellow **i1**, **i2** or **i3** button, the selected instrument will sound and then you can play that instrument on the keyboard.

NOTE • Tap the **STOP** button 4 times if the band performance is 4/4 time.  
• If you tap the **STOP** button while the band performance is playing, the performance tempo will adjust to the same speed that you tapped.  
• If you tap the **STOP** button too slowly, the tap function will not operate. If you tap the **STOP** button too fast, the tempo will be set to 240 beats per minute.

Try this one for fun!

**Have fun playing percussion.**

Press the yellow **i1** button so that “Percussion” is selected, play on the keyboard and you will hear many different percussion instruments.

Press the green **b3** button, and play the “Safari” or “Carnival”.  
OK, are you feeling like a drummer? Let's play along with the band performance.

Click Agogo Low Agogo High Wood Block Low Wood Block High

Bass Drum Snare Rim Shot Closed Hi-hat Open Hi-hat

